



StarFlange™ series 3200

Restrained Adapter Flange Coupling
for Ductile Iron Pipe
Sizes 3" - 36"

INSTALLATION INSTRUCTIONS - SIZES 3" - 36"




STEP 1

Check the StarFlange™ ensuring that no damage has occurred or parts are missing. Make sure that the O-ring gasket on the flange face of the StarFlange™ is securely in place.

The pipe end must be thoroughly cleaned for a distance of 2" greater than the length of the StarFlange™ body. (see dimension "D")

Slide the Stargrip® Gland on the plain end of the pipe making sure that the lip extension is towards the mechanical joint bell of the StarFlange™. Do not remove rubber washers prior to installation. Washers have been provided for proper wedge placement during shipment and installation.

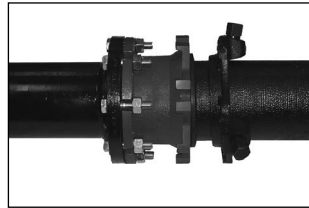

STEP 2

Brush both the gasket and the plain end of the pipe with soapy water or approved pipe lubricant, which meets ANSI/AWWA C111/A21.11. Slide the MJ gasket over the pipe with the beveled edge towards the MJ bell of StarFlange™.

Slide the StarFlange™ on to the pipe with the MJ bell towards the Stargrip® Gland. Pipe must be inserted into the StarFlange™ a minimum of 2.125" on 3"-4", 2.500" on 6"-12" and 3.000" on 14"-36" to attain maximum deflection per table.


Position the pipe and flanged end of StarFlange™ against the mating flange, making sure that the flange bolt holes line-up. Assemble the flanged joint using flange bolts. **Note: Flange bolts not supplied with StarFlange™. Refer TABLE B below for recommended Flange bolt torque values.**



STEP 3


Center the pipe so that the space between the OD of the pipe and the ID of the StarFlange™ is even all around the pipe. Slide the MJ Gasket into the MJ bell recess of the StarFlange™.

Slide the Stargrip® towards the StarFlange™ with the Gland lip against the gasket. Insert T-bolts and hand-tighten nuts.

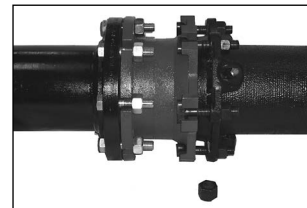


STEP 6

Continue tightening in an alternative manner going on the opposite sides [Star Pattern], until all of the nuts have been twisted off. If removal is necessary, utilize the 5/8" hex head provided. [If reassembly is required, assemble the joint in the same manner as above and tighten the wedge bolts to 90 ft-lbs on sizes 3"-20" and 120 ft-lbs on sizes 24"-36".

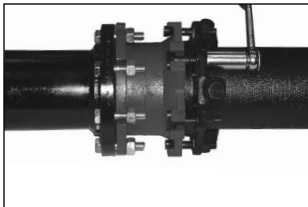

STEP 4

Tighten the T-bolts to normal range of bolt torque (see table below). It is necessary that the gland be brought up toward the bell flange evenly, maintaining approximately the same distance between the gland and the face of the flange at all points around the socket. T-bolts should be tightened alternately on opposite sides (Star Pattern) (See Table A).

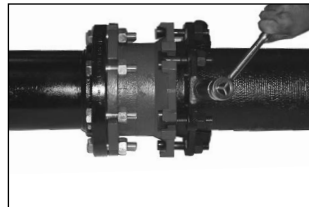

STEP 5

Hand tighten the torque limiting twist off nuts in a clockwise direction until all wedges are in firm contact with the pipe surface.

PIPE SIZE (IN)	BOLT SIZE (IN)	RANGE ¹ OF TORQUE (FT-LBS)
3	5/8	45-60
4-24	3/4	75-90
30-36	1	100-120

¹These torque ranges are requirements of AWWA C600

SIZE (IN)	RANGE ¹ OF TORQUE (FT-LBS)
3	45 - 60
4	75 - 90
6	75 - 90
8	90 - 110
10 - 12	90 - 110
14 - 16	90 - 110
18 - 20	90 - 110
24	90 - 110
30 - 36	110 - 130

Notes:

- StarFlange™ Series 3200 restraints are designed for use on ductile iron pipe that meets all physical requirements of ANSI/AWWA C151/A21.51. The pipe must be fully annealed to assure primary carbides have been dissolved and pearlite has been converted to ferrite. Please contact Star Pipe Products for technical assistance. Not to be used on plain end fittings or PVC or HDPE pipe.
- If effective sealing is not attained at the maximum torque indicated, then the joint should be disassembled, thoroughly cleaned, and reassembled. **Overstressing the bolts to compensate for poor installation practice is not acceptable.**
- May also be used on steel pipe of any size. For steel pipe 12" and under a transition gasket is required if the diameter regimen is IPS. For steel pipe 14" and larger, the pipe's outside diameter must be the same as ductile iron pipe (CIOD diameter regimen). For sizes 3" - 8", minimum SCH40 steel pipe wall thickness is required. For sizes 10" through 16" the minimum wall thickness must be equal to or greater than PC350 ductile iron pipe. For sizes 18" and above, the minimum wall thickness of the steel pipe must be equal to or greater than PC 250 ductile iron pipe.
- Stargrips® must be adequately wrapped or protected if they are covered by concrete to ensure that concrete does not enter the wedge pocket.
- Tightening of T-Bolts and torque limiting twist off nuts can be performed by use of Wrench (box, ratchet or pneumatic).
- For applications exceeding the maximum pressure ratings listed, please contact Star Pipe Products for recommendations.
- For applications with vertical offsets please contact Star Pipe Products for technical assistance.
- For applications on existing pipe, the surface of the pipe needs to be sufficient for proper wedge engagement. Please contact Star Pipe Products for technical assistance.
- Pressure ratings shall not exceed the maximum pressure rating of the ductil iron pipe it is installed on.

JRCAT23.01



® REGISTERED TRADEMARK OF STAR PIPE PRODUCTS

STAR® PIPE PRODUCTS
HOUSTON CORPORATE | TOLL FREE 1-800-999-3009 | FAX 281-558-9000
www.starpipeproducts.com

STAR® PIPE PRODUCTS